



# **PLASMA CENTRAL ADAPTOR**

## **Directions for use**

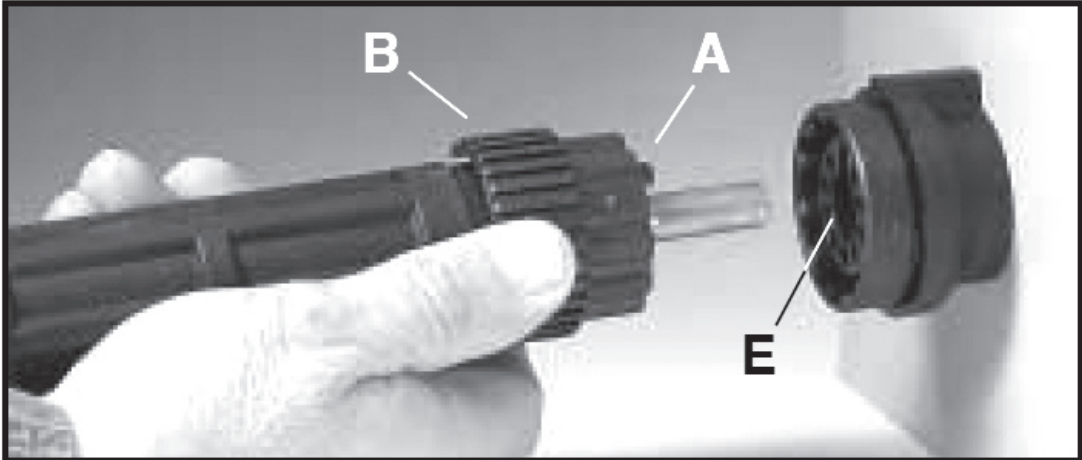

Attach the male connector (torch side) to the female one(machine side). Make sure that the positioning pin aligns (A) with the corresponding notch, and fasten the threaded ring (B).

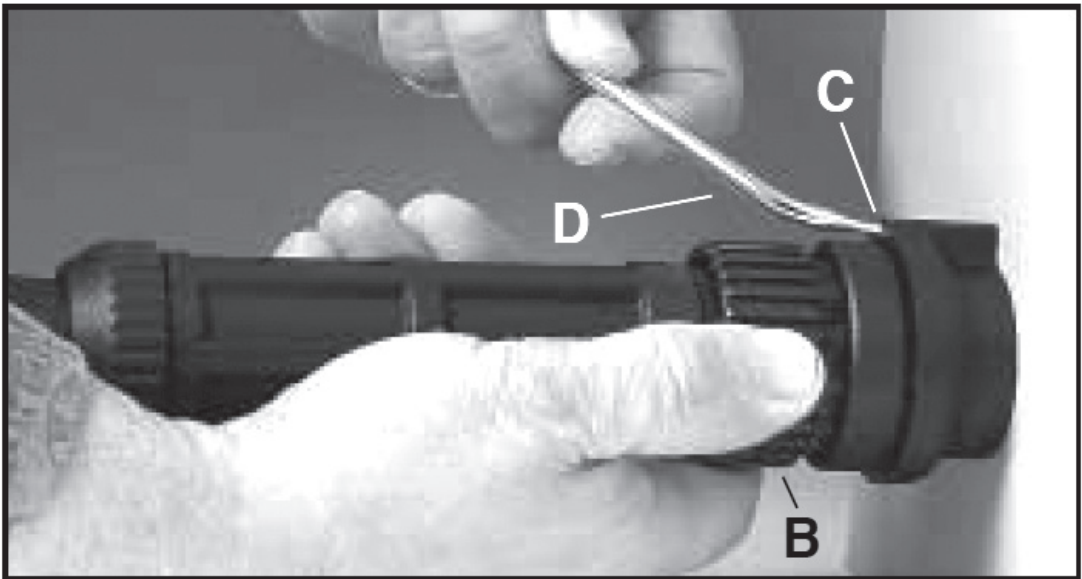

In order to fasten the ring (B), disengage the anti-rotation device by pressing it on proper hole (C) with the enclosed tool (D). To disconnect torch remove anti-rotation device first by attaching enclosed tool (D) to hole (C)